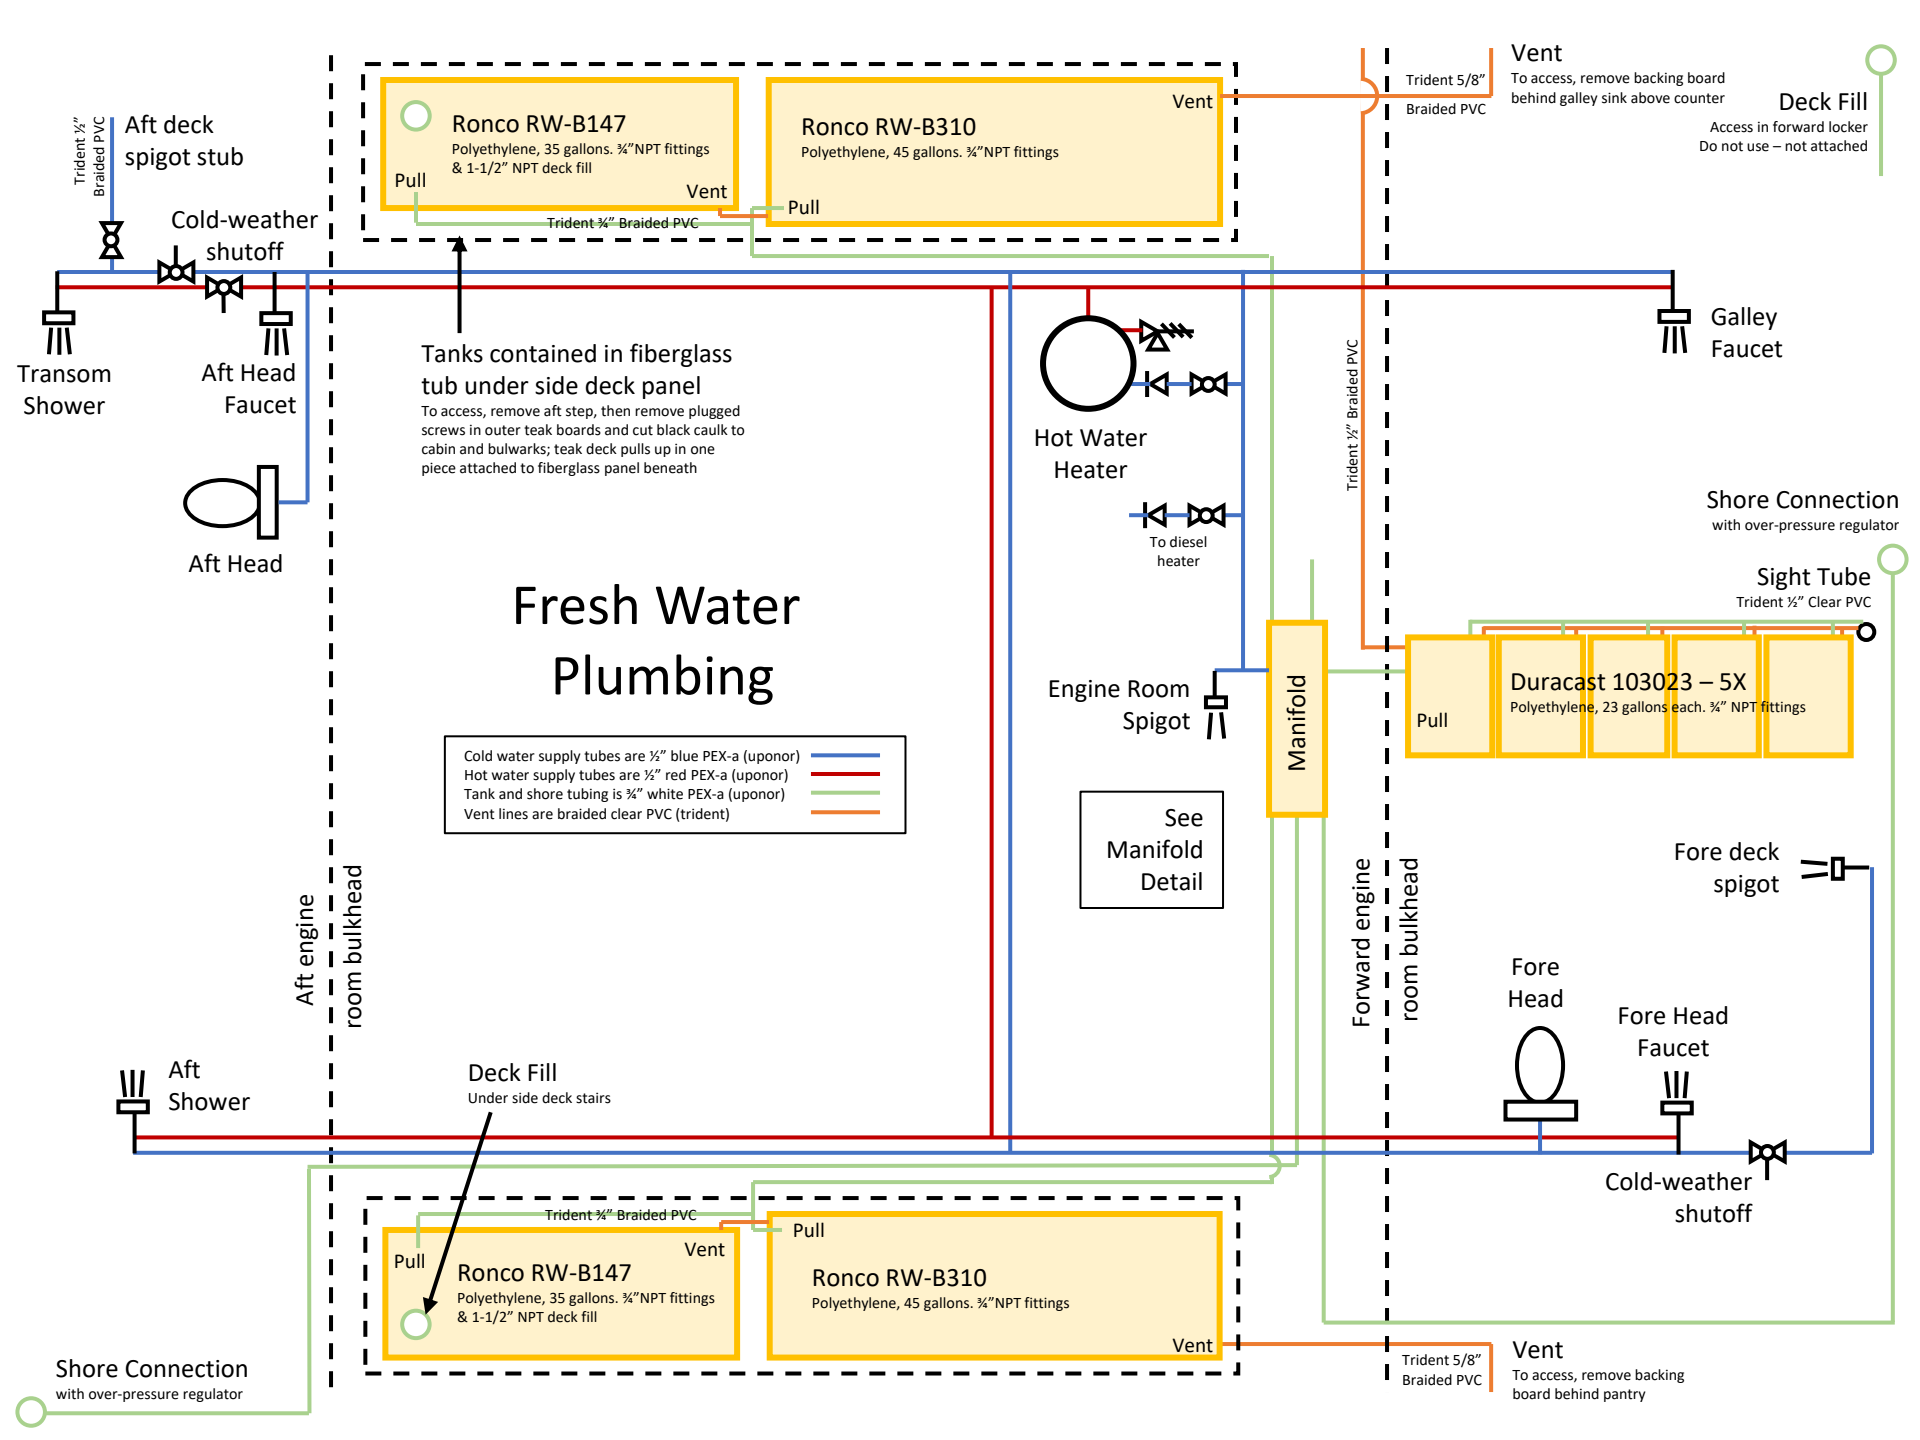
Fresh Water Plumbing
Aft deck spigot stub
Trident ½" Braided PVC
Cold-weather shutoff
Transom Shower
Aft Head Faucet
Aft Head
Tanks contained in fiberglass tub under side deck panel
To access, remove aft step, then remove plugged screws in outer teak boards and cut black caulk to cabin and bulwarks; teak deck pulls up in one piece attached to fiberglass panel beneath
Ronco RW-B147
Polyethylene, 35 gallons. ¾"NPT fittings & 1-1/2" NPT deck fill
Pull
Vent
Trident ¾" Braided PVC
Ronco RW-B310
Polyethylene, 45 gallons. ¾"NPT fittings
Vent
Pull
Trident 5/8" Braided PVC
Vent
To access, remove backing board behind galley sink above counter
Deck Fill
Access in forward locker
Do not use – not attached
Galley Faucet
Hot Water Heater
To diesel heater
Trident ½" Braided PVC
Shore Connection
with over-pressure regulator
Sight Tube
Trident ½" Clear PVC
Engine Room Spigot
Manifold
Pull
Duracast 103023 – 5X
Polyethylene, 23 gallons each. ¾" NPT fittings
Cold water supply tubes are ½" blue PEX-a (uponor)
Hot water supply tubes are ½" red PEX-a (uponor)
Tank and shore tubing is ¾" white PEX-a (uponor)
Vent lines are braided clear PVC (trident)
See Manifold Detail
Fore deck spigot
Fore Head
Fore Head Faucet
Cold-weather shutoff
Forward engine room bulkhead
Aft engine room bulkhead
Aft Shower
Deck Fill
Under side deck stairs
Trident ¾" Braided PVC
Pull
Vent
Ronco RW-B147
Polyethylene, 35 gallons. ¾"NPT fittings & 1-1/2" NPT deck fill
Pull
Ronco RW-B310
Polyethylene, 45 gallons. ¾"NPT fittings
Vent
Trident 5/8" Braided PVC
Vent
To access, remove backing board behind pantry
Shore Connection
with over-pressure regulator